

Phone description



Installing the battery in the telephone



Position the battery as shown in the drawing (A). Terminate the installation of the battery in its compartment by pressing as shown in the drawing (B).

- 1
 - Answer the call
 - Long press (feature depending on the system): redial last number or access the redial list
 - 2
 - Switching between two calls (Broker call)
 - Switch off ringer
 - Hang up
 - Long press : Switch on the phone / Switch off the phone
 - Return to previous menu
 - 3
 - Erase a character
 - Delete an entire field
 - 4
 - Back to homepage
 - Lock/unlock keypad (long press)
 - 5
 - Access MENU
 - Confirm
 - Navigate
 - Short press : access the company directory
 - Long press : Customizing your telephone ; Telephone ID (Features depending on the system)
 - 6
 - Short press : Access the ringer and vibrate adjustment feature
 - Long press : Activate vibrate only
 - 7
 - Short press : Activate/deactivate the loudspeaker
 - Long press : Activate/deactivate the mute feature
 - 8
 - Short press : Activate/deactivate the loudspeaker
 - Long press : Activate/deactivate the mute feature
 - 9
 - Long press (Features depending on the system) : Access to personal speed dial / Access the DTMF feature during a conversation
 - GAP mode : Switch from one call to the other
- LED**
- Green steady: the phone is on the charger and the battery is fully charged
 - Red steady: the phone is on the charger and the battery is charging
 - Slow yellow flashing: telephonic event such as unread message, missed call, etc.
 - Rapid yellow flashing: incoming call
 - Red flashing: out of coverage
 - Flashing when the phone is plugged into the charger means the same as when the phone is not plugged into the charger; however, the LED will display red or green in between the yellow flash depending on the charging status.
- 11 • 3.5 mm jack plug for headset and maintenance
 - 12 • Short press : Decrease the volume of ring tone during an incoming call (4 steps) or decrease volume of loudspeaker during a conversation (8 steps).
 - 13 • Long press : activate/deactivate the mute feature.
 - 14 • Short press : increase the volume of ring tone during an incoming call (4 steps) or increase volume of loudspeaker during a conversation (8 steps).
 - 15 • Long press : activate/deactivate the loudspeaker.
 - 16 • Clip to hook your phone on your belt. You can remove the clip and instead use the cover that is provided in the phone package.
- 15 • USB plug for charging the battery
 - 16 • Press on this key to light up the screen when the phone is in idle state

Call icons

- Making a call
- Receiving a call
- Call on hold

In the event of a multiple call, the icons are giving indices to represent the different correspondents

Status icons

The status icons are displayed on the welcome screen and indicate the status of the telephone.

- Battery charge level**
- Received messages voice mail and callback request texts and unanswered calls**
- Appointment programmed**
- Call diversion activated**
- Vibrator active**
- Ringer active**
- Ringer disabled**
- Radio reception quality**
- Loudspeaker on (in conversation)**
- Mute on (in conversation)**
- Economy mode activated and used (green)**
- Economy mode activated (gray)**

You can obtain details on the status icons from the tooltips that appear on the welcome screen when you use the navigator:



MENU icons

The MENU is accessible from the welcome screen by pressing the OK key (OK:). It provides access to all the functions available on your system.

- Directories:**
manage your personal directory and access the company directory.
- Redial**
call back the last number dialed.
- Divert**
divert your calls to another number.
- Mailbox:**
consult and send voice and text messages.
- Call pick-up:**
answer a call intended for another telephone.
- Appointment:**
program a call-back time.
- System lock:**
prohibit outgoing calls and modification of the programming.
- Guide: programming, list of functions,...**
- Adjustment:**
adjust contrast, activate or deactivate the beeps, lighting, etc.
- System selection**
- Installation**
- Manager/Assistant**
- Choice of language**
- Ringing setting**

Features

Described features are dependent on your system.. For more information, contact your installer or administrator.

	OmniPCX Office	OmniPCX Enterprise	GAP mode
Answered incoming calls ¹ Redialing (Long press) Send the call Switching between two outgoing calls			
Switching between two calls, either one or two incoming calls			
Ignore call End the call			
Calling from your personal directory (PersSpDial) Calling your correspondent by name (company directory) Programming your personal directory (PersSpDial)			
Calling your correspondent by name (company directory)			
Call from call log (All incoming, outgoing, missed or unanswered calls are displayed in the call log)			
Consulting external missed calls			
Consulting internal missed calls			
Consulting text messages Sending text messages			
Consulting your voice mailbox Sending a recorded message to a number a distribution list			enter the voicemail nb
Customising your voice greeting			
Divert your calls to another number.			Enter the feature code
Diverting calls to your voice mailbox			Enter the feature code
Different types of diversions			Enter the feature code
Automatic Message if no reply			
Do not disturb Forward if busy			Enter the feature code
Cancelling all diversions			Enter the feature code
Select the type of call to divert			
Modifying your personal code			
Choice of language			
Choose the tune			
Adjusting the ringer volume			
Access the ringer and vibrate adjustment feature			
Auto answer			
Your phone number			
Programming an appointment reminder			
Locking your telephone			
Locking the keypad			
Personal assistant			
Define an overflow number Define an associate number Standard			
Access to the handset settings menu (Device info , Coverage warning , Security ,...)			

Features accessible in conversation:

	Accessing the directories		Diverting your calls to your voice message service
	Transferring a call		Putting on common hold
	Switching to DTMF signals		Parking an external communication
	Switching between two calls (Broker call)		Call duration and cost
	Setting up a conference		Additional options (Features depending on the system)

GAP mode

Your telephone complies with the GAP standard and can be used in simplified mode.


The feature descriptions and feature codes are dependent on your system.

The operation of your phone depends on its single or multi-line installation. For more information regarding this configuration, contact the person in charge of your installation.

For more information on how to use your phone in GAP mode, please refer to the user manual.

Charging your telephone battery

How to dock your phone on the desk support

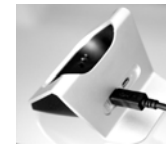

Put your phone on its support. Plug the USB cable into the 5V socket of the desk support. Plug the other end of the USB cable into the AC/DC adapter. Plug the adaptor into the mains power supply.

How to dock your phone with the USB cable



Plug the USB cable into the USB port of your phone. The other end of the USB cable can be plugged into the AC/DC adapter or into a computer USB port.

LED

- Green steady: the phone is on the charger and the battery is fully charged
 - Red steady: the phone is on the charger and the battery is charging
- Recharge your telephone battery regularly. The telephone can be on or off when recharging the battery. If the telephone is to remain unused or out of its charger for several weeks, remove the battery and store it separately.

The battery charging time is less than 3 hours.

Switch off the telephone before changing the battery.

