

Phone description		
		<ul style="list-style-type: none"> Answer the call. Long press (feature depending on the system): redial last number or access the redial list. Access to the company directory.
		<ul style="list-style-type: none"> Hang up. Long press: switch on the phone / switch off the phone.
		<ul style="list-style-type: none"> Return to previous menu. Erase a character. Delete an entire field.
		<ul style="list-style-type: none"> Short press: back to homepage. Long press: lock/unlock keypad.
		<ul style="list-style-type: none"> Access menu. Confirm. Navigate. Adjust volume level during conversation (up and down navigation keys).
		Access your personal directory.
		Activate/deactivate the mute feature during a conversation. No feature is associated with this key in idle mode.
		Access the call log.
		Short press (in idle mode): access the ringer adjustment feature. Long press (in idle mode): activate or deactivate ringer. Short press (incoming call): switch off ringer.
		Answering a call with loudspeaker activated. Activate/deactivate the loudspeaker during a conversation.

	Long press: access the dtmf feature during a conversation.	
	Led	<ul style="list-style-type: none"> Green steady: the phone is on the charger and the battery is fully charged. Red steady: the phone is on the charger and the battery is charging. Slow orange flashing: telephonic event such as unread message, missed call, etc. Rapid orange flashing: incoming call. Slow red flashing: out of coverage. Rapid red flashing: low battery warning. Flashing when the phone is plugged into the charger means the same as when the phone is not plugged into the charger.
	3.5 mm jack plug for headset and maintenance.	

Charging your telephone battery

Charging the battery on a single charger

Put your phone on its support. Plug the USB cable into a 5V socket (AC/DC adaptor, computer, ...).

The AC/DC adaptor is not provided with the set. Please contact your provider for a recommended AC/DC adaptor.

You can configure how the handset behaves when it is installed on the charger using the settings menu. Refer to the chapter on configuring your telephone.

LED

Green steady: the phone is on the charger (or connected to the USB cable) and the battery is fully charged.

Red steady: the phone is on the charger and the battery is charging.

Recharge your telephone battery regularly. The telephone can be on or off when recharging the battery. If the telephone is to remain unused or out of its charger for several weeks, remove the battery and store it separately.

The battery charging time is less than 10 hours.

Status icons

The status icons are displayed on the welcome screen and indicate the status of the telephone.

	Battery charge level ( >  >  > ).
	In charge (flashing icon).
	New events (voice messages, callback requests, unanswered calls).
	Missed calls
	Ringer active.
	Ringer disabled.
	Radio reception quality.
	Loudspeaker on (in conversation).
	Mute on (in conversation).
	Economy mode activated and used (green).
	Economy mode activated (gray).
	50 mW power.

You can obtain details on the status icons from the tooltips that appear on the welcome screen when you use the navigator:



MENU icons

The MENU is accessible from the welcome screen by pressing the OK key. It provides access to all the functions available on your system. All icons are described in their unselected state. When selected, the icons are displayed in purple.

	Consult and send voice and text messages.
	Call log
	Directories: Manage your personal directory and access the company directory.
	Access the general settings of the phone (key sound, economy mode, charger warning).
	Ringing setting.
	Install: Installation settings.

Call icons

	Making a call.
	Receiving a call.

Features

Answered incoming calls. Redialing (long press). Send the call.	
End the call.	
Calling from your personal directory (PersSpDial). Programming your personal directory (PersSpDial).	
Call from call log (All incoming, outgoing, missed or unanswered calls are displayed in the call log).	
Consulting text messages. Sending text messages.	
Consulting your voice mailbox.	
Choice of language.	
Choose the tune.	
Adjusting the ringer volume.	
Locking features on your terminal.	
Access the handset settings menu (Device info., Coverage warning., Security., ...).	