

Panasonic NS700 Miscellaneous information.

User Guides, NS700 Operator Manual and Word Labelling Templates can be downloaded at

<http://www.telcoms.com.au/panasonic.htm>

Recording DISA and AA greeting prompts.

To record dial *361 and the DISA number, e.g. 501,502 etc. i.e. to record Disa Message 501 (=OGM1) lift the handset and dial *361501

The phone will then indicate "5xx Wait" and beep for a few seconds. Recording will automatically start after the beeps.

Wait until the prompt says RECORDING 002 before speaking to prevent truncating of the first part of the message.

Press the Autodial store to save the message, the recording will replay, if necessary the REC button can be used to re-record.

*362 will allow listening, e.g. *362501 will play greeting number OGM1.

Setting programmable Buttons.

Any spare button can be user programmed as follows.

PROG [Button] 2 [Desired Number or sequence]

Note that once a button has been set the 2 is not required for editing.

e.g.

To program a speed dial to 0418181181 on Button 22 key in

PROG [Button 22] 2 [0P0418181181]

This will take the first available line and dial the number.

If a specific line is required e.g. for diversion of a Telstra DOT service line on Line 1 use the following.

e.g. Diversion Set *PROG [Button 22] 2 [P*37001P*72#0418181181#]*

Note P=Pause *37001 tells the system to use Line 1 *72 is Telstra Dot Divert the end # is to minimise the post dial delay, if for example line 7 was the line to be used *37007 is the access code.

e.g. Diversion Cancel *PROG [Button 22] 2 [P*37001*73#]*

