

# Panasonic



<KX-NT346>

## Quick Reference Guide IP Proprietary Telephone

Model No. **KX-NT343/KX-NT346/KX-NT366**

Thank you for purchasing an IP Proprietary Telephone (IP-PT). Please read this manual carefully before using this product and save this manual for future use. For more details, please refer to the manuals of the PBX.

**Note:** In this manual, the suffix of each model number is omitted unless necessary.

This unit supports the following optional devices and features:

	KX-NT343	KX-NT346	KX-NT366 <sup>*1</sup>
<b>Display</b>	3-Line	6-Line	6-Line
<b>Flexible Outside (CO) Line Buttons</b>	24	24	48 (12x4)
<b>Self Labelling</b>			✓
<b>KX-NT303 Add-on 12 key module</b>	✓	✓	
<b>KX-NT305 Add-on 60 key module<sup>*2</sup></b>	✓	✓	
<b>KX-NT307(PSLP1528) Bluetooth Module</b>	✓	✓	✓
<b>KX-A239AL/BX/X/EJ Optional AC Adaptor</b>	✓	✓	✓
<b>CODEC</b>	G.729A, G.711, G.722 <sup>*3</sup>		

✓: Available

<sup>\*1</sup> KX-NT366 is only available for KX-TDE100/KX-TDE200.

<sup>\*2</sup> KX-NT305 is only available for KX-TDE100/KX-TDE200.

<sup>\*3</sup> G.722 is only available for KX-TDE100/KX-TDE200.

- For information on connecting the KX-NT307, refer to the KX-NT307 Bluetooth<sup>®</sup> Module Installation Instructions.

### This model supports the following PBX versions:


KX-TDA30: PSMPr Software File version 4.0000 or later

KX-TDE100/KX-TDE200: PMMPR Software File version 1.0000 or later

### Trademark:

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Matsushita Electric Industrial Co., Ltd. is under licence.


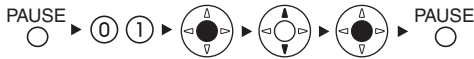
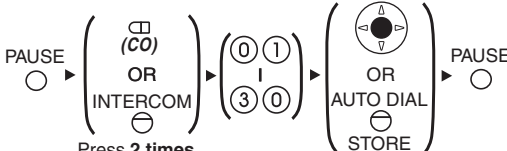
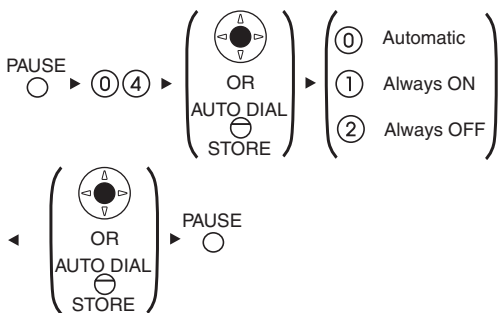
## Location of Controls

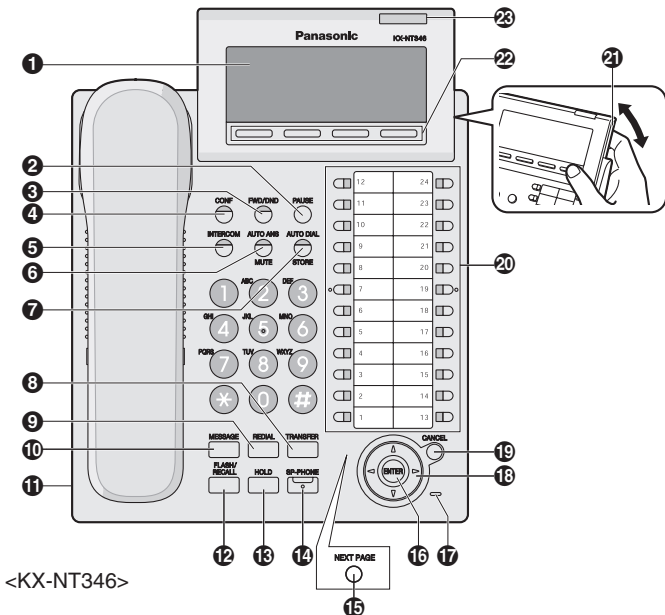

- 1 LCD (Liquid Crystal Display)**
- 2 PAUSE:** Used to insert a pause when storing a telephone number. This button is also used for programming this unit.
- 3 FWD/DND (Call Forwarding/ Do Not Disturb):** Used to set Call Forwarding or Do Not Disturb on your extension.
- 4 CONF (Conference):** Used to establish a multiple party conversation.
- 5 INTERCOM:** Used to make or receive intercom calls.
- 6 AUTO ANS (Auto Answer)/ MUTE:** Used to receive an incoming call in hands-free mode or mute the microphone/handset during a conversation.







- 7 AUTO DIAL/STORE:** Used for System/Personal Speed Dialling or storing programme changes.
- 8 TRANSFER:** Used to transfer a call to another party.
- 9 REDIAL:** Used to redial the last dialled number.
- 10 MESSAGE:** Used to leave a message waiting indication or call back the party who left the message waiting indication.
- 11 Headset Jack**
- 12 FLASH/RECALL:** Used to disconnect the current call and make another call without hanging up.
- 13 HOLD:** Used to place a call on hold.
- 14 SP-PHONE (Speakerphone):** Used for performing hands-free operations.
- 15 NEXT PAGE Key:** Used to switch the page for the Self Labelling feature. (KX-NT366 only)
- 16 ENTER:** Used to assign the selected item.
- 17 Microphone:** Used for hands free conversations.
- 18 Navigator Key:** Used to adjust the volume and the display contrast or select desired items.
- 19 CANCEL:** Used to cancel the selected item.
- 20 Flexible CO Buttons:** Used to seize an outside line or perform a feature that has been assigned to the key.
- 21 LCD Panel:** Can be adjusted to the desired angle.
- 22 Soft Buttons (S1-S4):** S1-S4 (located from left to right) are used to select the item displayed on the bottom line of the display.
- 23 Message/Ringer Lamp:** When you receive an intercom call, the lamp flashes green, and on an outside call, the lamp flashes red. When someone has left you a message, the lamp stays on red.

# Settings























<b>Speaker volume</b>	<i>While in a hands-free conversation</i>	 <p>Press <b>Up</b> to increase or <b>Down</b> to decrease the volume.</p>
<b>Handset/Headset volume*</b>	<i>While using the handset or headset</i>	
<b>Ringer volume</b>	<i>While on-hook or receiving a call</i>	
<b>LCD Contrast (for the main display)</b>	<i>While on-hook</i>	
<b>Ring Tone</b>		 <p>Press 2 times.</p>
<b>LCD Backlight</b>	<i>While on-hook</i>	

\* If you hear your own voice through the handset or headset, decrease the volume.

## Icon Meanings

 = Flexible CO button   
  = Off-hook   
  = On-hook  
 = Feature number   
  = Talk   
 C. Tone  = Confirmation Tone


## Making Calls

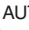Calling	
<b>To an extension</b>  ► <span style="border: 1px solid black; padding: 2px;">extension no.</span> ► 	<b>To an outside party</b>  ►  ► <span style="border: 1px solid black; padding: 2px;">outside phone no.</span> ► 
Redial	
 ► REDIAL  ► 	
Quick Dialling	
 ► <span style="border: 1px solid black; padding: 2px;">quick dial no.</span> ► 	
One-touch Dialling	
<b>To store (KX-NT343/KX-NT346)</b> For storing on a KX-NT366, refer to page 13.  ►  ► <span style="border: 1px solid black; border-radius: 50%; padding: 2px;">2</span> ► <span style="border: 1px solid black; padding: 2px;">desired no.* (max. 32 digits)</span> ►  ►  * Enter outside line access number before outside phone number.	
<b>To dial</b>  ►  assigned as a One-touch Dialling button ► 	
Personal Speed Dialling	
<b>To store</b>  ► <span style="border: 1px solid black; border-radius: 50%; padding: 2px;">*</span> <span style="border: 1px solid black; border-radius: 50%; padding: 2px;">3</span> <span style="border: 1px solid black; border-radius: 50%; padding: 2px;">0</span> ► <span style="border: 1px solid black; padding: 2px;">personal speed dial no. (2 digits)</span> ► <span style="border: 1px solid black; padding: 2px;">desired no.* (max. 32 digits)</span> ► <span style="border: 1px solid black; border-radius: 50%; padding: 2px;">#</span> C. Tone  * Enter outside line access number before outside phone number.	
<b>To dial</b>  ►  ► <span style="border: 1px solid black; border-radius: 50%; padding: 2px;">*</span> ► <span style="border: 1px solid black; padding: 2px;">personal speed dial no. (2 digits)</span> ► 	

# Features List
 
## System Speed Dialling

### To dial



## Doorphone Call



## During a Conversation

### Call Hold

#### To hold



 
#### To retrieve a call at the holding extension



#### To retrieve an outside call from another extension



### Call Transfer



## Useful Features

### Multiple Party Conversation

#### To add other parties during a conversation (i.e., conference)

 


#### To leave a conference




## Setting the Telephone According to Your Needs

### Do Not Disturb



### Timed Reminder

#### To set

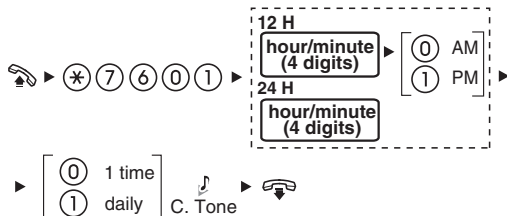

#### To cancel




#### To stop or answer the ring back



## Before Leaving Your Desk

### Call Forwarding

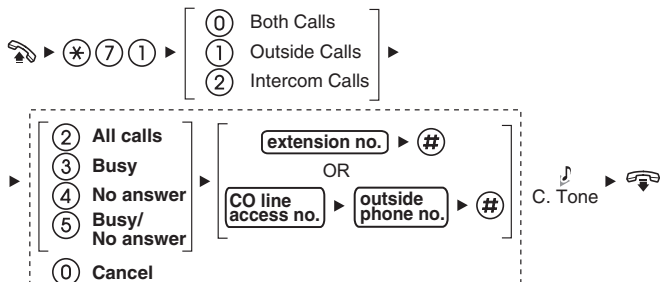


# Features List

## Making Use of the Voice Mail Service


### Listening to a message

#### From your own extension

-  ▶ **VPS extension no.** ▶  
▶ **Mailbox Password\*** **#**

\* If you have no password, you can skip the last step.

#### From someone else's extension

-  ▶ **VPS extension no.** ▶  
▶ **#** **6** ▶ **\*** ▶  
▶ **mailbox no.** ▶  
▶ **Mailbox Password\*** **#**

\* If you have no password, you can skip the last step.

#### KX-TVM series

- ① Listen to Message
- ② Deliver Message
- ③ Mailbox Management
- ▶ ④ Automated Attendant
- ⑤ Message Notification
- ⑥ Other Features
- ✳ End Call

#### KX-TVP series

- ① Listen to Message
- ② Deliver Message
- ③ Check Mailbox Distribution
- ▶ ④ Automated Attendant
- ⑤ Mailbox Management
- ⑥ Other Features
- ✳ End Call

### Leaving a message

-  ▶ **VPS extension no.** ▶

#### From your own extension

- Mailbox Password\*** **#**

#### From someone else's extension

- ▶ **#** **6** ▶ **\*** ▶ **mailbox no.** ▶ **Mailbox Password\*** **#** ▶

\* If you have no password, you can skip the last step.

- ▶ ② ▶ Enter the desired mailbox number ▶ ② ① ▶ Leave a message ▶ ① ② ▶

#### To send the message immediately

- ① ② (KX-TVM series)

- ② (KX-TVP series)

#### To set the delivery time

- ① ①

▶ Follow the guidance



### During playback

- ① Repeat Voice Guidance
- ✳ Exit

- Consult your dealer for more details regarding feature numbers.
- It is possible to assign flexible CO buttons as feature buttons.
- Control panel/button names and descriptions can be found in “Location of Controls” on page 2.

## Accessing Features Using the Display

---

### Using the LCD Display

It is possible to access the following directories, logs, and menus by pressing left or right on the Navigator Key while this unit is idle:

- Extension Number Directory
- System Speed Dialling Directory
- Personal Speed Dialling Directory
- Outgoing Call Log
- Incoming Call Log

### Entering Characters

You can enter alphabetic characters and digits using the dialling buttons. Pressing a dialling button repeatedly displays different characters, as shown in the following tables. While entering characters, you can move the cursor with the left and right Navigator keys and delete characters with the TRANSFER button. To toggle between Table 1 and Table 2, press the Soft button (S1) at any time while entering characters. For a list of available characters, refer to the following tables.

**Table 1 (Standard mode)**

Times Buttons	1	2	3	4	5	6	7	8	9
①	!	?	"	1					
②	A	B	C	a	b	c	2		
③	D	E	F	d	e	f	3		
④	G	H	I	g	h	i	4		
⑤	J	K	L	j	k	l	5		
⑥	M	N	O	m	n	o	6		
⑦	P	Q	R	S	p	q	r	s	7
⑧	T	U	V	t	u	v	8		
⑨	W	X	Y	Z	w	x	y	z	9
⑩	(space)	.	,	'	:	;	0		
*	/	+	-	=	<	>	*		
#	\$	%	&	@	(	)	€	£	#

## Accessing Features Using the Display

**Table 2 (Option mode)**


Times Buttons	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
①	!	?	"	ä	ö	ü	1								
②	A	B	C	a	b	c	À	Á	Â	Ã	Ä	Å	Æ	Ç	2
③	D	E	F	d	e	f	Ð	È	É	Ê	Ë	3			
④	G	H	I	g	h	i	Ì	Í	Î	Ï	4				
⑤	J	K	L	j	k	l	5								
⑥	M	N	O	m	n	o	Ñ	Ò	Ó	Ô	Õ	Ö	Ø	Œ	6
⑦	P	Q	R	S	p	q	r	s	Š	ß	7				
⑧	T	U	V	t	u	v	Ù	Ú	Û	Ü	8				
⑨	W	X	Y	Z	w	x	y	z	Ý	Ž	9				
⑩	(space)	.	,	'	:	;	0								
*	/	+	-	=	<	>	*								
#	\$	%	&	@	(	)	€	£	#						

**Table 3 (Option mode when connected to CE model of PBX)**

Times Buttons	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
①	!	?	"	ä	ö	ü	1								
②	A	B	C	a	b	c	Á	Â	Ã	Ä	Å	Ć	Ç	Č	2
③	D	E	F	d	e	f	Ď	Ð	É	Ě	Ë	ě	3		
④	G	H	I	g	h	i	Í	Î	4						
⑤	J	K	L	j	k	l	Ĺ	Ĺ	5						
⑥	M	N	O	m	n	o	Ň	Ň	Ó	Ô	Õ	Ö	6		
⑦	P	Q	R	S	p	q	r	s	Ř	Ř	Š	Š	Ş	ß	7
⑧	T	U	V	t	u	v	Ť	Ť	Ú	Ú	Û	Ü	8		
⑨	W	X	Y	Z	w	x	y	z	Ž	Ž	Ž	Ý	9		
⑩	(space)	.	,	'	:	;	0								
*	/	+	-	=	<	>	*								
#	\$	%	&	@	(	)	€	£	#						

## Self Labelling (KX-NT366 only)


The KX-NT366 IP-PT features 12 flexible buttons, with an LCD screen next to the buttons. Each item can be named on the LCD screen through personal or system programming to reflect the function of its corresponding flexible button. Additionally, the flexible buttons can be organised into 4 “pages”, allowing you to assign a total of 48 items to the 12 flexible buttons. You can toggle between pages by pressing the NEXT PAGE key, as follows:

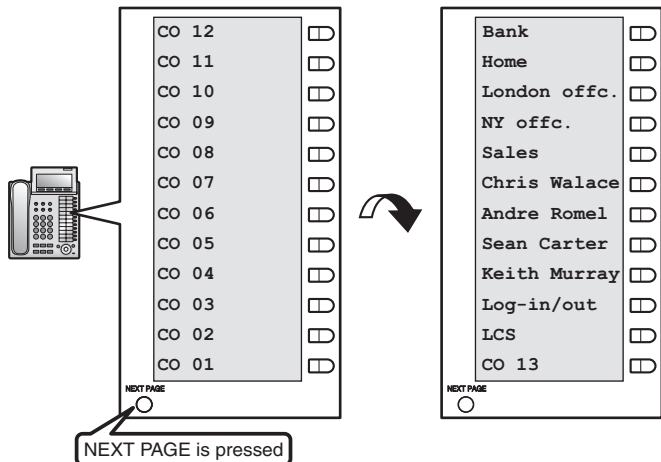

- This feature is only available for the KX-TDE100/KX-TDE200.


## Self Labelling (KX-NT366 only)

### Storing a One-touch Dialling button, and setting the displayed text for the Self Labelling LCD Display

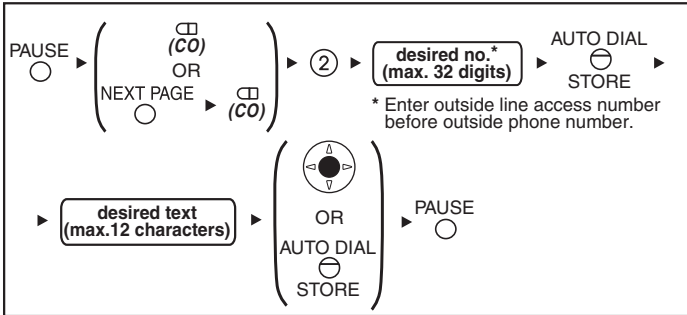


- Similar to the above procedure, when storing other types of buttons (CO buttons, feature buttons, etc.), the displayed text for the Self Labelling LCD Display can be assigned.

### Setting the Self Labelling LCD Display contrast levels

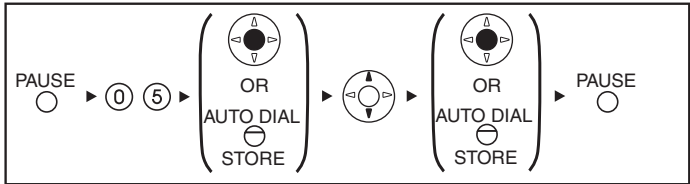

## Connection

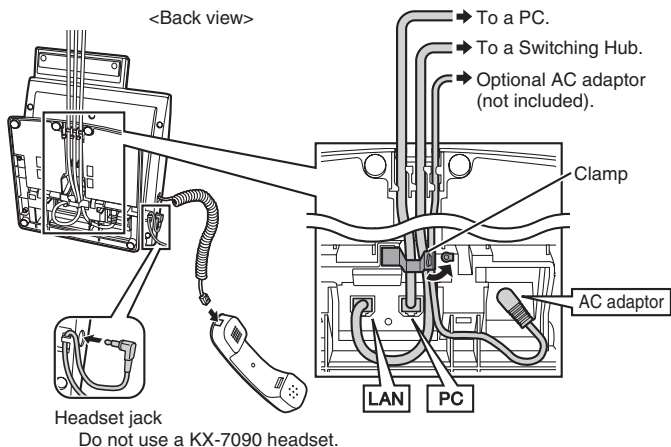

### PC connection

- Use a straight CAT 5 (or higher) Ethernet cable (not included) that is 6.5 mm in diameter or less.
- For further information on the connection to a PC, refer to the documentation provided for the PBX.

### Switching Hub connection

- Use a straight CAT 5 (or higher) Ethernet cable (not included) that is 6.5 mm in diameter or less.

### AC adaptor

- Use a Panasonic AC adaptor KX-A239AL (PQLV206AL)/KX-A239BX (PQLV206CE)/KX-A239X (PQLV206)/KX-A239EJ (PQLV206E).
- The AC adaptor is used as the main disconnect device. Ensure that the AC outlet is located near the unit and is easily accessible.


### CAUTION:

#### When selecting Ethernet cables

Use flexible, high-quality, snagless (without strain relief) cables. Do not use cables with coating that may tear or crack when bent.

To prevent damage to the cables, use cables\* that do not protrude from the bottom of the base when the operation board is set to level 1. (For information on adjusting the angle of the operation board, refer to page 16.)

\* Use cables as shown.

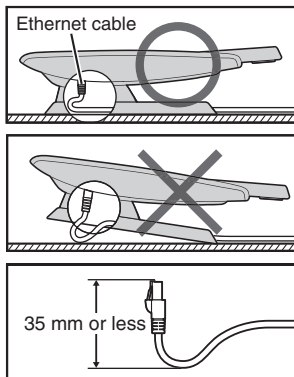

#### When connecting cables


Ensure that the Ethernet cables and the AC adaptor cord are inserted in the grooves, and are clamped to prevent damage to the connectors. Leave some slack in the AC adaptor cord and the Ethernet cable connected to the hub.

#### When connecting headset jack

Ensure that the headset cord is wound around the hook to prevent damage to the connector.

## Operation Board Angle Adjustment

The angle of the operation board can be set to one of eight angles (level 1 = 0°, level 8 = 45°).

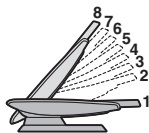

### CAUTION:

Hold the operation board until the operation board is secured at the desired angle. Make sure you do not pinch your fingers when raising or lowering the operation board.


### To raise:

Gently lift the operation board one level at a time.

### To lower:

Raise the operation board to level 8. Next, with one hand on the base of the unit, lift the operation board again to release the latch, then slowly push the operation board down to level 1. If the operation board cannot be lowered to level 1, repeat this step.

- When a KX-NT305 is attached to this unit, first lift the unit's handset cradle to release the latch (1), then with one hand on the base of the KX-NT305, similarly lift its operation board to release its latch (2).

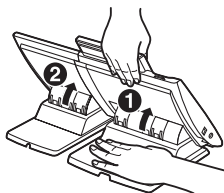

### Locking the Handset Hook

Pull down the handset hook until it locks to prevent the handset from falling off the handset cradle when the unit is mounted to a wall or set at a high angle. To temporarily place the handset down during a conversation, hook it over the top edge of the unit as shown.





## Installing the KX-NT303/KX-NT305

The KX-NT303/KX-NT305 allow 12/60 additional flexible CO buttons to be added to this unit. These buttons are used to seize an outside line, make a call using One-touch Dialling, or perform a feature that has been assigned to the key.





<with a KX-NT346>

### CAUTION:


Before you install or uninstall the Add-on Key Module, turn off the unit by disconnecting the AC adaptor (if connected) and the Ethernet cable connected to the switching hub.

### KX-NT303 (For KX-NT343/KX-NT346)


1. Open the cover.
2. Attach the KX-NT303 to your unit with the screws (included).

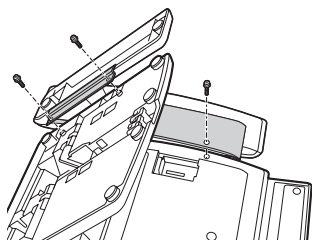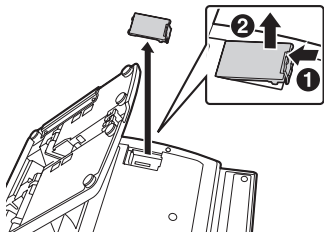

3. Plug the flat cable into the connector (1), then bend the cable slightly as shown (2).

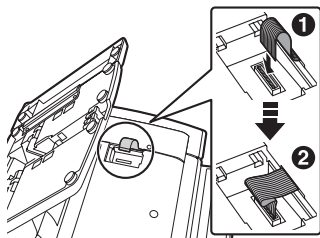


4. Close the cover.

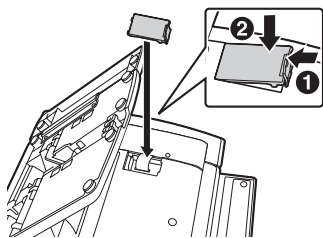


## Installing the KX-NT303/KX-NT305

### KX-NT305 (For KX-NT343/KX-NT346)


1. Open the cover.

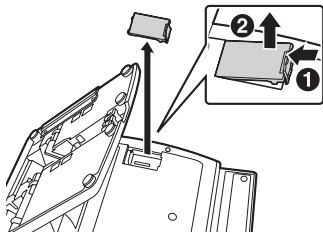


2. Attach the KX-NT305 to your unit with the screws\* (included).

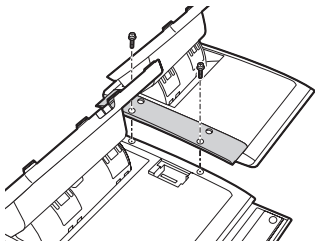

3. Plug the flat cable into the connector (1), then bend the cable slightly as shown (2).

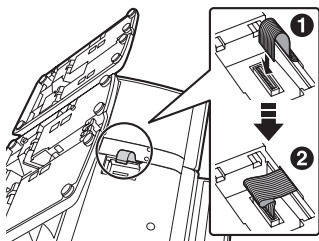


4. Close the cover.

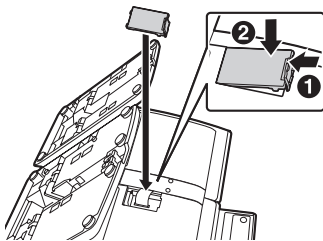

\* Two types of screws (2 screws of each type) are included with the KX-NT305, as shown below.


For attaching to the unit	For wall mounting

1. Remove the wall mounting adaptor from the unit as shown, set the operation board to level 1, then connect and secure the cables.
  - The cables can also be run from the top of the unit (page 14, 15).

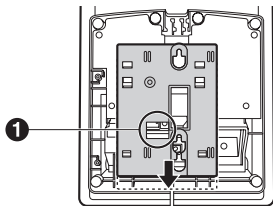


2. Attach the wall mounting adaptor as shown.

- Make sure the cables are not pinched by the wall mounting adaptor. When running the cables from the top of the unit, look through the opening in the wall mounting adaptor (1) to confirm that the cables are not being pinched.

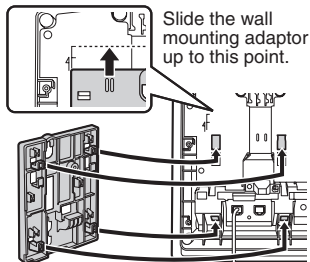

3. Drive the 2 screws (included) into the wall either 83 mm or 100 mm apart, and mount the unit on the wall.

- You can find a wall mounting template on page 23.
- Make sure that the wall that the unit will be attached to is strong enough to support the unit (approx. 1.5 kg; approx. 2.5 kg when the KX-NT305 is attached).
- Make sure the cables are securely fastened to the wall.
- When this product is no longer in use, make sure to detach it from the wall.

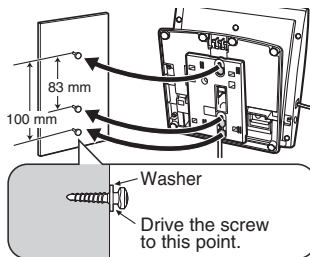

- If using a KX-NT305, attach the KX-NT305 (page 18) to the unit first, and perform step 3 only.
- For information on locking the handset hook, refer to page 16.

## ***Important Information***

---

### **When using KX-NT300 series IP-PTs, keep the following conditions in mind.**

- If the unit does not operate properly, disconnect the unit from the Ethernet cable and then connect again.
- If you are having problems making calls, disconnect the Ethernet cable and connect a known working IP-PT. If the known working IP-PT operates properly, have the defective IP-PT repaired by an authorised Panasonic factory service centre. If the known working IP-PT does not operate properly, check the PBX and the Ethernet cable.
- Wipe the unit with a soft cloth. Do not clean the unit with abrasive powders or with chemical agents such as benzene or thinner.
- Use only the correct Panasonic handset.
- Do not disassemble this unit. Dangerous electrical shock could result. The unit must only be disassembled and repaired by qualified service technicians.
- If damage to the unit exposes any internal parts, immediately disconnect the cable or cord. If the power is supplied from the network to the IP-PT [Power-over-Ethernet], disconnect the Ethernet cable. Otherwise, disconnect the AC adaptor cord. Then return this unit to a service centre.
- Never attempt to insert wires, pins, etc. into the vents or other holes of this unit.
- This unit is designed to aid the visually handicapped to locate dial keys and buttons.

### **Take special care to follow the safety suggestions listed below.**

#### **Safety**

- 1) The unit should only be connected to a power supply of the type described in the Quick Reference Guide or as shown on the label on the unit.
- 2) When left unused for a long period of time, the optional AC adaptor should be unplugged from the AC outlet, if you are using Power-over-Ethernet, disconnect the Ethernet cable.

#### **Installation**

##### **Environment**

- 1) Do not use this unit near water, for example, near a bathtub, washbowl or sink. Damp basements should also be avoided.
- 2) Keep the unit away from heating appliances and devices that generate electrical noise, such as fluorescent lamps, motors and televisions. These noise sources can interfere with the performance of the unit. It also should not be placed in rooms where the temperature is less than 5 °C or greater than 40 °C.

### Placement

- 1) Do not place heavy objects on top of this unit.
- 2) Care should be taken so that objects do not fall onto, and liquids are not spilled into, the unit. Do not subject this unit to excessive smoke, dust, moisture, mechanical vibration, shock or direct sunlight.
- 3) Place the unit on a flat surface.

### WARNING:

TO PREVENT POSSIBLE FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

THIS HANDSET EARPIECE IS MAGNETISED AND MAY RETAIN SMALL FERROUS OBJECTS.

DISCONNECT THIS UNIT FROM POWER OUTLET/THE ETHERNET CABLE IF IT EMITS SMOKE, AN ABNORMAL SMELL OR MAKES UNUSUAL NOISE. THESE CONDITIONS CAN CAUSE FIRE OR ELECTRIC SHOCK. CONFIRM THAT SMOKE HAS STOPPED AND CONTACT AN AUTHORISED SERVICE CENTRE.

### IMPORTANT NOTICE:

- Under power failure conditions, the IP-PT may not operate. Please ensure that a separate telephone, not dependent on local power, is available for use in remote sites in case of emergency.
- For information regarding network setup of the IP-PT such as IP addresses, please refer to the Installation Manual for the Panasonic PBX.
- If an error message is shown on your display, consult the network administrator.
- The firmware of the KX-NT343, KX-NT346, and KX-NT366 are protected by copyright laws and international treaty provisions, and all other applicable laws. It cannot be reverse engineered, decompiled or disassembled.
- This equipment shall not be set to make automatic calls to telecom 111 Emergency service.\*

### Note:

- This device is equipped with pulse dialling while the telecom standard is DTMF tone dialling. There is no guarantee that the Telecom Lines will always continue to support pulse dialling.\*

\* The regulation is applied in New Zealand only.

This unit is capable of being used in conjunction with hearing aids fitted with inductive coil pick-ups. The handset should be held as for normal conversation. For operation, the hearing aid should be set to its "T" position or as directed in the operating instructions for the hearing aid.



## ***Important Information***

---

### **Information on Disposal for Users of Waste Electrical & Electronic Equipment (private households)**



This symbol on the products and/or accompanying documents means that used electrical and electronic products should not be mixed with general household waste.

For proper treatment, recovery and recycling, please take these products to designated collection points, where they will be accepted on a free of charge basis. Alternatively, in some countries you may be able to return your products to your local retailer upon the purchase of an equivalent new product.

Disposing of this product correctly will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

#### **For business users in the European Union**

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

#### **Information on Disposal in other Countries outside the European Union**

This symbol is only valid in the European Union.

If you wish to discard this product, please contact your local authorities or dealer and ask for the correct method of disposal.

# CE 0682


This product is intended to be connected to a Panasonic PBX only. Panasonic Communications Co., Ltd. declares that this equipment is in compliance with the essential requirements and other relevant provisions of Radio & Telecommunications Terminal Equipment (R&TTE) Directive 1999/5/EC.

Declarations of Conformity for the relevant Panasonic products described in this manual are available for download by visiting:

**<http://www.doc.panasonic.de>**

Contact:

Panasonic Services Europe  
a Division of Panasonic Marketing Europe GmbH  
Panasonic Testing Centre  
Winsbergring 15, 22525 Hamburg, Germany

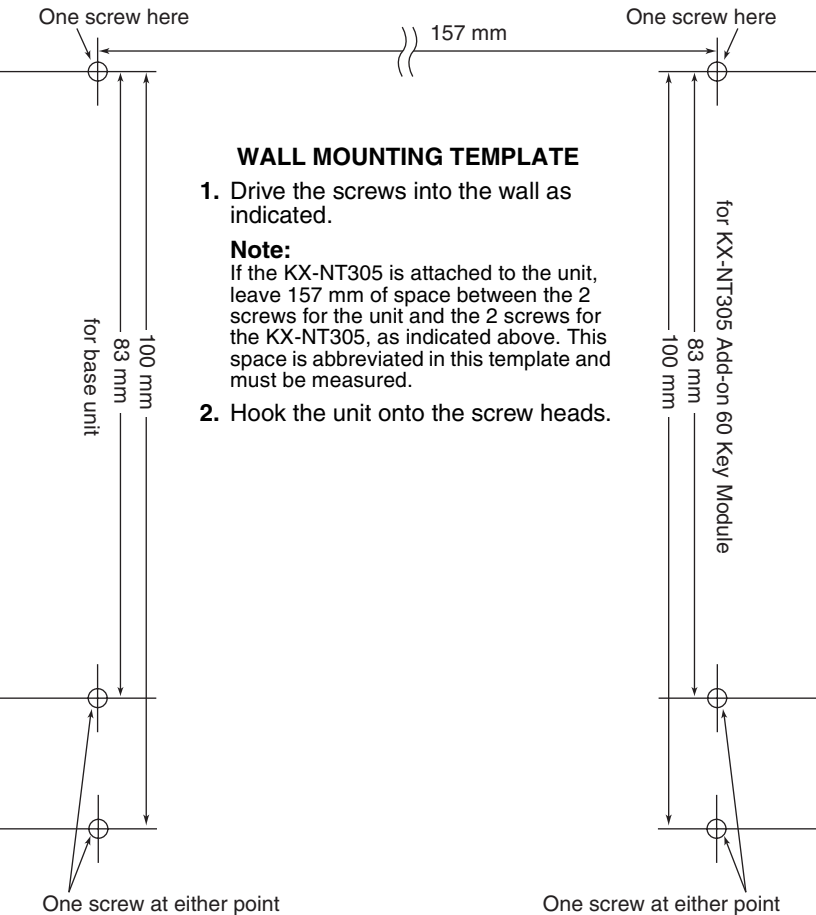

**Panasonic Communications Co., Ltd.**

1-62, 4-chome, Minoshima, Hakata-ku, Fukuoka  
812-8531, Japan

**Copyright:**

This material is copyrighted by Panasonic Communications Co., Ltd., and may be reproduced for internal use only. All other reproduction, in whole or in part, is prohibited without the written consent of Panasonic Communications Co., Ltd.

© 2007 Panasonic Communications Co., Ltd. All Rights Reserved.

**PSQX4395ZA** KK0707ME0 (X/AL/NZ/CE)